 

# TOUCH-SCRE

**INSERT** your **VOTER CARD** into the bright yellow slot located at the bottom left of the voting machine. Push it all the way in until you feel it "click."



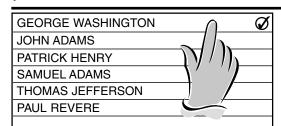

anywhere in the box that comains are name of the candidate of your choice. Confirm that a green check mark appears in the circle located in the box in which your choice appears.

you vote by touching the same selection again. The candidate is unselected and all circles for that contest appear again.

GEORGE WASHINGTON	$\cap$	0
JOHN ADAMS		0
PATRICK HENRY	-JA/D	0
SAMUEL ADAMS		0
THOMAS JEFFERSON		0
PAUL REVERE		0


To vote for Associate Justice of the Supreme Court; Presiding Justice, Court of Appeal; or Associate Justice, Court of Appeal, TOUCH THE CIRCLE beside the word "Yes". To vote against that candidate, TOUCH THE CIRCLE beside the word "No".

the name of a qualified candidate by touching WRITE-IN on the candidate list. When the on-screen keyboard appears, key in the candidate's name, then touch **OK**. The write-in candidate's name now appears on the list of candidates.



BACK **NEXT**  to the following page by touching **NEXT** at the bottom right of the screen. To return to the previous page, touch **BACK** at the bottom left of the screen.

### TOUCH THE OFFICE OR ISSUE TO MAKE A CHANGE

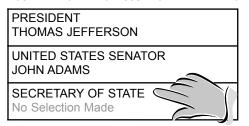

a summary of all your votes on the **REVIEW** page. To make a change, touch the office or issue to return to the ballot page for that race. When **REVIEW** is completed press Touch Here to Print and Review a Paper Record of Your Ballot. Follow the steps listed on the screen to complete the review



**COMPLETE** your voting by touching the "Cast Ballot" box on the final screen.

## **YOUR BALLOT IS NOW CAST!**

The paper audit trail will roll up so no one can see your ballot. You will see a Thank You for Voting message and your Voter Card will eject. Return it to a poll worker.

process.



TSVV-F/GG